

## MaxxFan Wireless Remote Control Model Series 7000-7500



### FAN ON & Power Off; Press this button:

- To start the fan.
- To turn fan off.
- To exit Auto Mode.



### Fan Speed; Press this button:

- To change fan speed. This fan has four speeds.



### Vent Lid Position; Press this button:

- Note: This button is not active while in Auto Mode.
- To open and close the vent lid.
- While in Manual Mode to close the vent lid and turn the fan off.
- Note: If the fan loses power use the knob located at the ceiling to manually open & close the vent lid until power is restored.



### Air Exhaust / Intake; Press this button:

- Note: In Auto Mode, the fan direction is automatically positioned to Exhaust.
- To change air direction.



### Thermostat Set Temperature

- Press up or down button to view the current temperature setting; press again to change the set temperature.
- Note: Set temperature will flash during viewing or when changing to a new setting. After 3 seconds of inactivity the room temperature will reappear.
- Press up button to raise the thermostat temperature setting.
- Press the down button to lower the thermostat temperature setting.
- The thermostat adjustment range is from 29°F to 99°F or -1°C to 37°C.
- To change Fahrenheit to Celsius press and hold the set temperature keys simultaneously.



### Auto Mode / Fan Off

- Press this button to enter Auto Mode.
- Auto Mode allows the thermostat to turn the fan on and off depending on the thermostat setting. If the setting is lower than the room temp, the fan will run. If the setting is higher than room temperature the fan will not run.
- Pressing this button while in Auto Mode closes the vent lid, turns the fan off, and shuts off the Auto Mode feature.
- While in Auto Mode, the vent lid will open turning the fan on, or close turning it off to maintain set temperature.



### Low Battery Indicator

- When the battery is at full charge, three black power bars are displayed.
- One or no power bars displayed indicates batteries need replacement.



### Transmission Signal

- Always point your remote control in the general direction of your ceiling unit.**
- This symbol is displayed on the screen to indicate the signal was transmitted.
- A beep or tone from the ceiling unit indicates the signal from the remote control was received.
- Your remote control is coded to control and operate any MaxxFan; to set it to operate only one MaxxFan; press and hold the Vent and Speed Buttons, the LCD Screen will display "A0" the default control code. To teach the remote to control one particular MaxxFan, press the up or down "Set Temp" button to change from A1 thru A9. This provides you with nine possible code selections.

Display Screen  
\*Remove Protective Film



Two AAA Batteries Provided

*This MaxxFan has 4 fan speeds	Fan Speed			
	Low	Medium 1	Medium 2	High
Air Volume (CFM)	500	617	730	Over 900
Power Consumption (Amps)	1.45	1.84	2.53	4.2
Speed (RPM)	815	890	936.8	1223
Noise (sones)	1.66	XXX	4.11	7.46